

# Motorized Goniometer Stage

# **Instruction Manual**







## Model Number: KGW□□□□□□□□

Please use and operate only after ensuring a firm understanding of the instruction manual. Failure to observe this may result in personal injury and/or property damage!



IMPORTANT – The 'colour inside' logo on the cover page of this publication indicates that it contains colours which are considered to be useful for the correct understanding of its content. Users should therefore print this document using a colour printer.

This manual does not cover all KGW series models.

Please use the product after ensuring an understanding of the content.

# **Contents**

1.	Introduction
1.1	Before Using This Product
1.2	Safety Precautions4
1.3	General Product Warnings and Precautions5
2.	Overview
2.1	Model configuration7
2.2	Attached screw8
2.3	Name of Each Part9
2.4	Description of Labels
2.5	Specifications 11
2.6	Timing chart
2.7	Product Dimensions
2.8	Connection 19
2.9	Operating Environment
2.10	Mounting Guidelines
3.	Compliance with EU Directives
3.1	Low Voltage Directive
3.2	EMC Directive
3.3	RoHS Directive
3.4	Compliance with EMC Directive
4.	Maintenance and Inspection
4.1	Inspection
4.2	Maintenance
4.3	Storage and Transport
4.4	Disposal Method
5.	Warranty Scope, Warranty Period
<b>■</b> Co	ontact Information 36

## 1. Introduction

#### 1.1 Before Using This Product

Thank you for purchasing this product.

\* This manual contains such information as the required functionality, performance, and usage method and so on for use of this product.

Please read this manual carefully beforehand in order to ensure correct use of the product.

Always store this manual in a readily accessible location after reading.

\* Please contact SURUGA SEIKI Co., Ltd. if this manual is lost or damaged.

This product is a highly rigid, high-accuracy precision positioning stage. This machine is intended for use based on the prerequisite that it is integrated into equipment. Refer to the information on residual risk in this manual for details on residual risk. When using this product integrated into equipment, always conduct a risk evaluation, and verify and implement risk reduction measures for the equipment as a whole to ensure safe use.

This product should only be handled by those who have read this manual carefully and fully understand its content. Please read the "Safety Precautions" carefully beforehand in order to ensure correct use. Please understand that SURUGA SEIKI accepts no responsibility for compensation for damages incurred as a result of failure to heed this warning.

#### 1.2 Safety Precautions

The precautions indicated here are intended to ensure safe and correct use of the product, and to prevent harm or injury to customers or others before it happens. Always read these safety precautions carefully and ensure an understanding of the content before use.



Indicates a potential hazard with high level of risk which, if not avoided, will result in death or serious injury.



Indicates a potential hazard with medium level of risk which, if not avoided, could result in death or serious injury.



Indicates a potential hazard with low level of risk which, if not avoided, could result in minor or moderate injury.

The safety precautions indicated in this instruction manual refer to the following standards. ISO 12100:2010



Indicates "prohibited" content.



Indicates "compulsory" content.

#### 1.3 General Product Warnings and Precautions

Warning symbols on devices are equivalent to the warnings indicated in the relevant manuals.





This product should only be handled by those who have read this manual carefully and fully understand its content. Failure to use the product correctly may result in injury or a fault.





The use of this product in the medical equipment, pharmaceutical, biological, food, or cosmetic fields is prohibited.





The use of this product for aerospace instruments, nuclear plant components, weapons, arms, or other military applications is prohibited.





Never disassemble, modify, or carry out unwarranted repairs on this product. Failure to observe this may result in an unexpected accident.





Do not place fingers or objects in the opening of the product. Failure to observe this may result in injury or a fault.





Do not transport the product or carry out mounting work with an unnatural posture. Failure to observe this may result in injury or a fault.





Users must not touch the product during operation. Furthermore, ensure that the product is not touched by anyone other than users. Failure to observe this may result in injury.



In the following cases, stop use of the product immediately and notify SURUGA SEIKI Co., Ltd. Continued use of the product may result in injury or a fault.



- If the product emits an abnormal noise
- If the product exhibits abnormalities such as an abnormal odour or smoke
- If the product suffers damage after being dropped
- If the cable is damaged or torn
- If liquid is spilled on, or foreign material gets inside the product
- If there is any play in component parts such as the table or cover





If any abnormalities are confirmed, cut the supply of power to the DC power supply immediately. After doing so, disconnect the stage cable from the stage.





Do not forcibly bend, pull, or trap the cable. Failure to observe this may result in damage to the cable.



**⚠ CAUTION** 

Use the cable, driver, and DC power supply specified by SURUGA SEIKI. Use of other than those specified is not covered by warranty.

## 2. Overview

This product is a positioning stage driven by a stepping motor.

K G W 0 4 \_ \_ \_ \_ \_ \_ \_ \_

Positions at desired locations are determined by moving the table in the rotational direction with a worm gear.

The product is mainly used for the purpose of making fine angular adjustments.

## 2.1 Model configuration

This section explains the model configuration of this product.

#### Type with 40x40mm table

(	1 2 3	4 5
No.	Contents	Description
1	Model number	KGW
2	Table size	04 : 40x40mm
	Datation and a	040 : 40mm
3	Rotating center	060 : 60mm
	Camananitian	L: L type
4	Sensor position	R: R type
		B: Standard cables: Connector free on one end, 2 m (D214-2-2EK)
		D: Standard cables: Connector free on one end, 4m (D214-2-4EK)
(5)	Cable option	G: Robot cables: Connector free on one end, 2m (D214-2-2RK)
		J: Robot cables: Connector free on one end, 4m (D214-2-4RK)

No symbol: Without cable

## Type with 60x60mm table

No.	Contents	Description
1	Model number	KGW
2	Table size	06 : 60x60mm
		050 : 50mm
(3)	Dotating contan	075 : 75mm
(3)	Rotating center	100 : 100mm
		125 : 125mm
	Sensor position	L: L type
4		R:R type
	Cable option	B: Standard cables: Connector free on one end, 2 m (D214-2-2EK)
		D: Standard cables: Connector free on one end, 4m (D214-2-4EK)
(5)		G: Robot cables: Connector free on one end, 2m (D214-2-2RK)
		J: Robot cables: Connector free on one end, 4m (D214-2-4RK)
		No symbol: Without cable

## 2.2 Attached screw

Standard hexagon socket head cap screws for mounting have been provided.

## **KGW04**


Attached screws: M3x6 hexagon socket head cap bolts: 4

## **KGW06**

Attached screws: M4x10 hexagon socket head cap bolts: 4

## 2.3 Name of Each Part

The names of each product part are as follows.

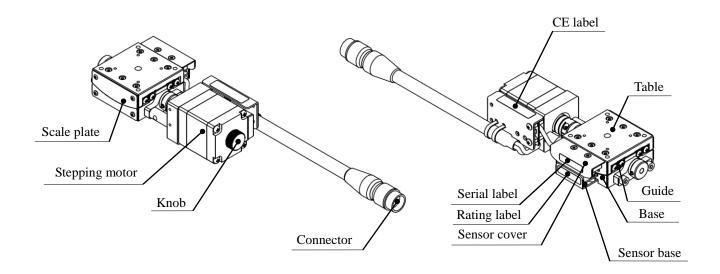





In order to avoid injury and damage if the product drops, always carry the product by holding the base.






The knob is set to high-speed rotation when driving, and should therefore not be touched.

#### 2.4 Description of Labels

The content of product labels is described below.

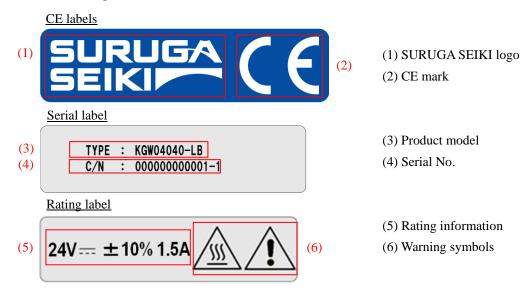

<sup>\*</sup>There is a case where other labels are affixed to places other than the labels described in this manual. Please do not peel off because these are labels for internal management.

The content of product labels on the packing box is described below.



Indicates that the box should be handled with care to prevent applying any impact.



Indicates that care should be taken when handling the packing box as the product is fragile.



Indicates that the box should be protected when handling to prevent it from getting wet.



Indicates that the box should not be turned upside down or stacked horizontally.



Indicates that corrugated cardboard can be recycled.



Indicates that the packaging material can be recycled, and that the material is corrugated cardboard.

## 2.5 Specifications

## ■ Main specification

Model number	KGW04040-L	KGW04060-L	
(Opposite operating pos. type)	KGW04040-R	KGW04060-R	
Height of rotating center	40±0.2 mm	60±0.2 mm	
Stroke (*1)	±8°	±6°	
Table size	40 x 4	90 mm	
Travel mechanism (deceleration rate)	Worm gea	ar (1/240)	
Resolution (pulse)	0.003°	(FULL)	
MAX speed	15°/s [5kHz]		
Guide	Crossed roller guide		
Material (finishing)	Aluminium (black anodized, blass-black coating finish)		
Load capacity	3kgf [29.4 N]		
Weight	0.4 kg		
Moment rigidity	Pitch 1.30/Yaw 1.16	5/Roll 0.27 ["/N·cm]	
Height of stage	20±0.2 mm		
Rotation center deflection accuracy	≤ 0.01 mm		
Repeatability	≤ ±0.005°		
Lost motion	≤ 0.01°		
Electrical rating	DC24V±10% 1.5A		

Model number	KGW06050-L	KGW06075-L	KGW06100-L	KGW06125-L
(Opposite operating pos. type)	KGW06050-R	KGW06075-R	KGW06100-R	KGW06125-R
Height of rotating center	50±0.2 mm	75±0.2 mm	100±0.2 mm	125±0.2 mm
Stroke (*1)	±10°	±8°	±6°	±5°
Table size		60 x 6	60 mm	
Travel mechanism	Worm gear	Worm gear	Worm gear	Worm gear
(deceleration rate)	(1/160)	(1/225)	(1/292)	(1/360)
Resolution (pulse)	⇒ 0.0045° (FULL)	⇒ 0.0032° (FULL)	⇒ 0.002466° (FULL)	⇒ 0.002° (FULL)
MAX speed	22.5°/s [5kHz]	16°/s [5kHz]	12.5°/s [5kHz]	10°/s [5kHz]
Guide	Crossed roller guide			
Material (finishing)	Aluminium (black anodized)			
Load capacity	5kgf [49 N]			
Weight	0.5 kg			
Moment rigidity		Pitch 0.30/Yaw 0.10	0/Roll 0.11 ["/N·cm]	
Height of stage	25±0.2 mm			
Rotation center deflection accuracy	≤ 0.01 mm			
Repeatability	≤ ±0.003°			
Lost motion	≤ 0.01°			
Electrical rating	DC24V±10% 1.5A			

**■** Each electric component specification

Each electric component specification				
	Model number	C005C-90215P-1		
		5 phase stepping motor 0.75 A/phase		
Motor	Туре	(Oriental motor Co., Ltd.)		
	Step angle	0.72°		
	Limit sensor	Installed		
	Origin sensor(ORG)	Installed		
	Proximity origin sensor(NORG)			
	Model number	Photomicro sensor EE-SX4134 (OMRON Corporation)		
Sensor		Photomicro sensor EE-SX4320 (OMRON Corporation) *		
Selisor	Power voltage	DC5 - 24 V ±10%		
	Consumption current	60 mA or less		
	Control output	NPN open collector output DC 5 -24V (8mA or less)		
		Residual voltage 0.3 V or less (load current 2 mA)		
	Out logic	When light is shielded: output transistor OFF(non-conduction)		
	Model number	HR10A-10J-12P(73) (Hirose Electric Co., Ltd.)		
Connector	Applicable receptacle connector	HR10A-10P-12S(73) (Hirose Electric Co., Ltd.)		


<sup>\*</sup> Scheduled for change from 2018 onward

#### ■ Noise level

• A-weighted sound pressure level: This product does not emit noise greater than 70 dB.

#### \*1 Definition of direction

The direction moving away from the motor is defined as the + (CW) direction, and the direction moving towards the motor is defined as the - (CCW) direction.

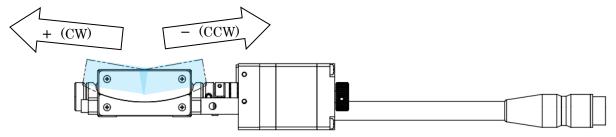





Avoid using the product if the motor surface temperature reaches 80  $^{\circ}\text{C}$  or higher.

Failure to observe this may result in burns or a fault. The motor surface may still be hot, risking burns, even if the temperature has not reached  $80\,^{\circ}$ C. Never touch the motor with bare hands.



If the temperature exceeds 80  $^{\circ}\text{C}$ , adjust the current value and operating interval.





Use the product within the withstand load and maximum speed indicated in the specifications. Failure to observe this maintain result in injury or damage. Also the specified accuracy cannot guaranteed.

#### 2.6 Timing chart

of end face Mech. limit Mech. limit face Mech. stopper Non detected (light enters) CCW limit sensor Detected (light shielded) ORG sensor Non detected (light enters) Detected (light shielded) CW limit sensor Non detected (light enters) Detected (light shielded) CW Limit Center **CCW** Limit sensor stroke sensor CW direction CCW direction

[degree]

Origin end Opposite side

	CW limit	Origin End face	Opposite side of end face	CCW limit
KGW04040	8.5	0	2.5	8.5
KGW04060	6.5	0	2.1	6.5
KGW06050	10.5	0	2.5	10.5
KGW06075	8.3	0	1.8	8.3
KGW06100	6.3	0	1.4	6.3
KGW06125	5.2	0	1.1	5.2

<sup>\*</sup> The coordinates are design values. The actual coordinates may differ by a margin of error of approximately  $\pm 0.5$  degree.

<sup>\*</sup> The timing chart indicates the sensor timing, and not output signal logic. Refer to the output transistor ON/OFF display indicated under sensor output logic in the electric specifications.





Depending on the table operating position, there is a possibility that hands may be trapped, potentially resulting in injury.

Never touch the product while in the drive status.







Do not manually rotate the motor knob and move the product beyond its limit when the table is at the stroke end. Failure to observe this may result in damage to the product.


## 2.7 **Product Dimensions**

#### KGW04-L series

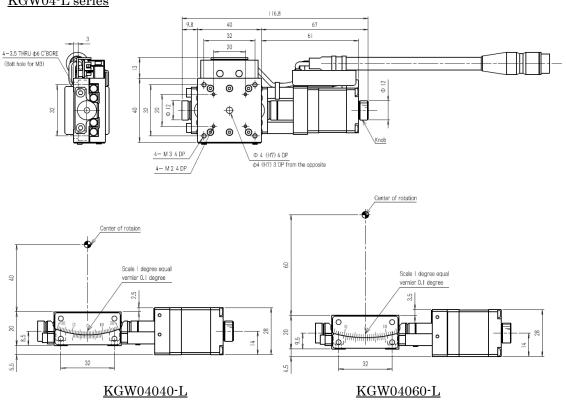

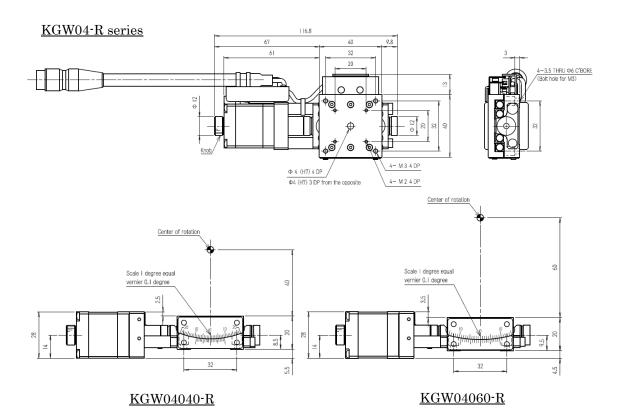



## KGW06-L series

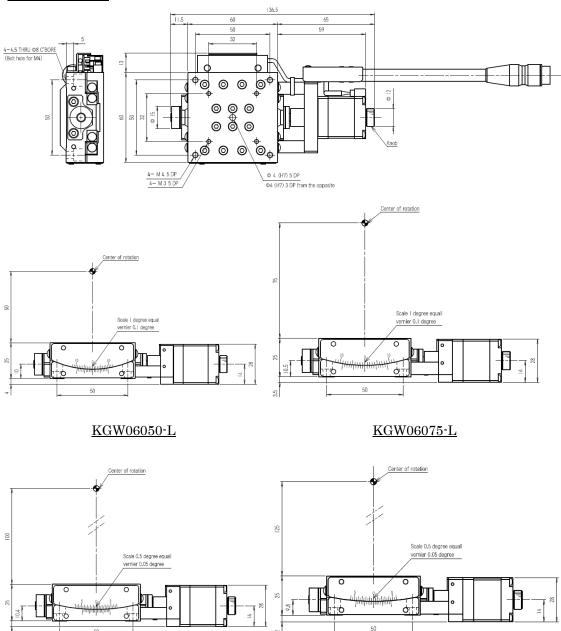

KGW06100-L

KGW06125-L

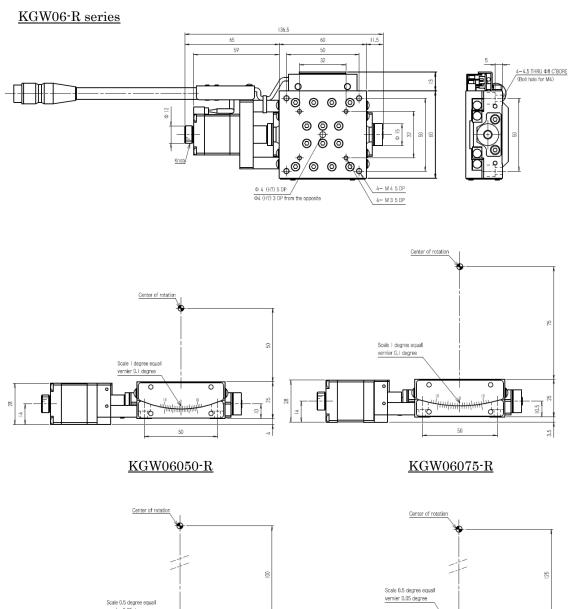

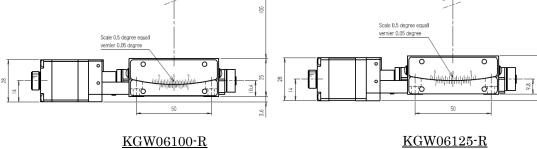






Do not exceed the usable depth indicated at tapped holes. Failure to observe this may result in damage to the stage.

## 2.8 Connection

## • System configuration

The system configuration of this product is as follows.

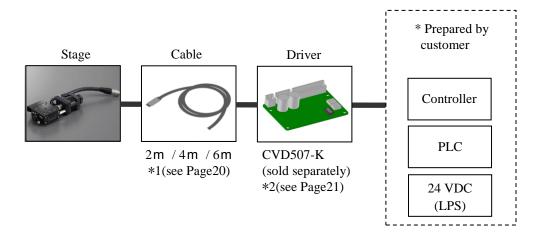

## \* 1 Specified cable (SURUGA SEIKI)

	SPEC			
Option code	В	D	- (Sold separately)	
Model number	D214 - 2 - 2EK	D214 - 2 - 4EK	D214 - 2 - 6EK	
Existence of connector	One	end (driver side) loose	wire	
Connector on driver side		-		
Connector on Stage side	HR10A - 10P - 12S(73) (Hirose Electric Co., Ltd.)			
Cable length	2 m	4 m	6 m	
Minimum bending radius	radius R33 mm			
Colour of insulator	Core A  Gray Red Black Brown  Body shield  Drain			

	SPEC				
Option code	G	J	- (Sold separately)		
Model number	D214 - 2 - 2RK	D214 - 2 - 4RK	D214 - 2 - 6RK		
Existence of connector	One	end (driver side) loose	wire		
Connector on driver side		-			
Connector on Stage side	HR10A - 10P - 12S(73) (Hirose Electric Co., Ltd.)				
Cable length	2 m	4 m	6 m		
Minimum bending radius	R33 mm				
Colour of insulator	Orange Blue Yellow Green Red Brown White Purple				

## \* 2 Specified driver (sold separately)


SPEC		
Model number	CVD507 - K (Oriental motor Co., Ltd.)	
Applicable motor	C005C-90215P-1	
Input power	DC24 V±10% 1.4 A ( Max )	
Rated current	0.75 A/phase	
Number of partitions	1 ~ 1/250	
Use temperature range	0~50°C	
Outside dimension 65(W) x 45(D) x 21(H) mm		
Weight	0.02 kg	
Signal input	Photo coupler input	

#### • Pin allocation

#### · Stage



Connector

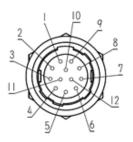


HR10A-10J-12P(73) (Hirose Electric Co., Ltd.)

#### Pin Signal The function of terminal 1 Motor lead (Blue) 2 Motor lead (Red) 3 Motor Motor lead (Orange) 4 Motor lead (Green) 5 Motor lead (Black) **CWLS** CW limit sensor output 6 7 **CCWLS** CCW limit sensor output 8 Open 9 Sensor Power (DC5-24 V) Power(+) 10 ORG ORG sensor output 11 **GND** Power( - ) 12 F.G F.G.

## · Stage cable (D214-2-2EK, D214-2-4EK, D214-2-6EK, D214-2-2RK, D214-2-4RK, D214-2-6RK)



Driver side

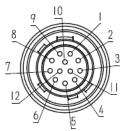


HR10A-10P-12S(73) (Hirose Electric Co., Ltd.)

Pin	The function of terminal	Colour
1	Motor lead	Blue
2	Motor lead	Red
3	Motor lead	Orange
4	Motor lead	Green
5	Motor lead	Black
6	CW limit sensor output	Brown
7	CCW limit sensor output	Yellow
8	GND	_
9	Sensor Power (DC5-24 V)	Gray
10	ORG sensor output	Purple
11	GND	White
12	F.G.	<u> </u>

<sup>\*</sup> This cable has one end (driver side) loose wire

#### • Example of wiring

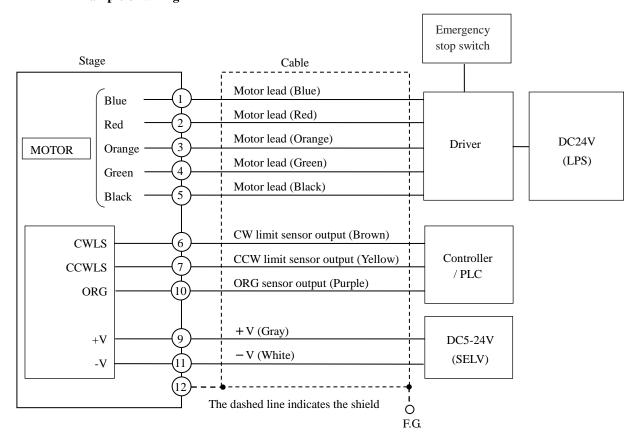

<sup>\*</sup> Install an emergency stop switch on the power supply of the driver.





There is a possibility that hands may be trapped, potentially resulting in injury if abnormal operation occurs due to incorrect wiring.

Perform test operation to verify whether the product is functioning normally.

#### 2.9 Operating Environment

Operating environment: Indoors, 5 to 50 °C, 20 to 70% RH (there should be no condensation) Recommended operating environment: Indoors,  $22 \pm 5$  °C, 20 to 70% RH (there should be no condensation)

Above sea level: 2000m or lower Protection level: IP00 (IEC60529)

Overvoltage category: II

Pollution level: 2 (IEC60664-1)

The temperature at which the product can be used will differ due to the wide-ranging conditions involved such as stage installation conditions, operating conditions, and performance.



Avoid use in places such as the following. Failure to observe this may result in an accident or a fault.

- · Places with a lot of dust or powder dust (especially metal powder)
- · Places exposed to direct sunlight or radiant heat



- · Places near fire
- · Places where the product may be exposed to water or oil
- · Places where corrosive gas or flammable gas are produced
- · Places subject to vibration or shock
- · Places with a lot of salt content or organic solvent
- · Places where X-rays are in use

#### 2.10 Mounting Guidelines

#### **■** Equipment on which the table, base are mounted

Flatness guideline for applicable equipment: within 10 µm





Mounting equipment of poor flatness on the table or base, or mounting a table or base of poor flatness on equipment may result in deformation of the stage surface and affect accuracy.

#### **■** Mounting orientation

The stage specifications are based on the condition that it is installed on a flat surface. Caution is required if using the product when installed on other than a flat surface such as when mounted vertically or horizontally on its side. Both withstand load and accuracy will be greatly affected by the mounting orientation. Please contact the SURUGA SEIKI marketing centre if there are points on which you are unclear.





Carrying out mounting work with an unnatural posture may result in injury or damage if the product drops. Check the safety of the surrounding environment, and carry out mounting work with a safe posture.

#### **■** Mounting method


Move the table by rotating the motor knob, and then secure it using all of the stage mounting knobs. Use the screws provided to mount the table.

#### **KGW04**

Mounting screws: M3x6 hexagon socket head cap bolts: 4 (Tightening torque : 1.0 N·m)

#### **KGW06**

Mounting screws: M4x10 hexagon socket head cap bolts: 4(Tightening torque: 2.3 N·m)

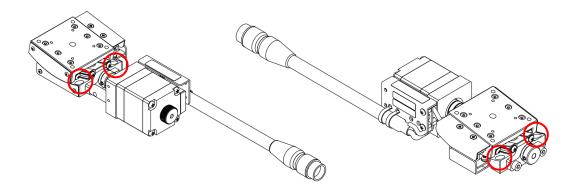

Red circles: mounting holes





When mounting the stage, ensure a sufficient work space to ensure that the prescribed tightening torque can be applied.

## 3. Compliance with EU Directives

#### 3.1 Low Voltage Directive

EN 61010-1:2010

Safety requirements for electrical equipment for measurement, control, and laboratory use -

Part 1: General requirements

#### 3.2 EMC Directive

SURUGA SEIKI conducts EMC testing on the stage based on "Example of installation and wiring" below.

Compliance with the EMC Directive will differ depending on the controller and wiring used with the product, as well as the product layout. To ensure EMC compliance, it is therefore necessary to install and wire the product based on "Example of installation and wiring" below, and customers are responsible for verifying EMC compliance for their own machines.

EN 61000-6-2:2005

Electromagnetic compatibility (EMC)

Generic standards

Immunity for industrial environments

#### EN 61000-6-3:2007+A1:2011

Electromagnetic compatibility (EMC)

Generic standards

Emission standard for residential, commercial and light-industrial environments

#### 3.3 RoHS Directive


This product complies with the following RoHS Directive standard.

EN 50581: 2012

Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

#### 3.4 Compliance with EMC Directive

#### **■** Example of installation and wiring

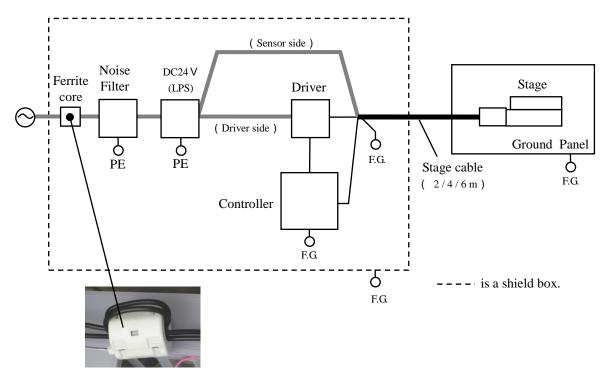

Ferrite core (KRFC-13, Kitagawa Industries Co., Ltd.)





#### Stage installation

Mount the stage on a grounded metal plate.



#### Controller, driver, DC power supply installation

- · Use a controller and DC power supply which comply with the EMC Directive.
- · Use a DC power supply with reinforced insulation at both the primary and secondary sides, and for which output is restricted (LPS).



- · Use the driver specified by SURUGA SEIKI.(Specified driver: CVD507-K)
- $\cdot$  Install the driver, controller, and DC power supply inside the housing.
- $\cdot$  Install a noise filter at the DC power supply primary side (AC input side).
- · Attach a ferrite core (KRFC-13, Kitagawa Industries Co., Ltd.) with two turns locate to immediate vicinity of the noise filter.
- · Employ a configuration and arrangement that allows the supply of power to the DC power supply to be cut off in the event of an abnormality.





#### Cable connection

· Use a stage cable specified by SURUGA SEIKI.

(Specified stage cables: D214-2-2EK, D214-2-4EK, D214-2-6EK, D214-2-2RK, D214-2-4RK, D214-2-6RK)



· Wire the cable with the shortest length of wiring, and do not wrap or bundle the excess portion if too long.





## **Grounding method**

Use a wide, thick, even grounding surface for the grounding point.

## 4. Maintenance and Inspection

#### 4.1 Inspection

Inspect the following items before and after stage operation.

If an abnormality occurs, stop using the product, and contact SURUGA SEIKI Co., Ltd.

#### [Inspection items]

- · Is there an abnormal noises?
- · Is there an abnormal odour?
- · Is the cable is damaged or torn?
- · Are there any signs of liquids having been covered up, or any foreign material inside the stage?
- · Are there any signs of dropping or external impact?
- · Is there any mounting screw or connector connection looseness?
- · Is there any play in component parts such as the table or cover?





When carrying out inspections, always cut the supply of power to the DC power supply to ensure safety. After doing so, disconnect the stage cable from the stage.





If any abnormalities are confirmed, cut the supply of power to the DC power supply immediately. After doing so, disconnect the stage cable from the stage.





Employ a configuration and arrangement that allows the supply of power to the DC power supply to be cut off.





Grease is used on this product. There is a possibility of inflammation if grease adheres to the body when carrying out cleaning or inspection, etc. If grease adheres to the body, wash thoroughly to remove.



Wear protective gloves when carrying out inspections.

## 4.2 Maintenance

If abnormalities are observed when carrying out inspections, contact SURUGA SEIKI Co., Ltd., and if a fault is then suspected, return the product to SURUGA SEIKI Co., Ltd. for repair.

#### <u>Inquiries</u>

Tel: +81-3-6711-5014 FAX: +81-3-6711-5021

URL: <a href="http://eng.surugaseiki.com">http://eng.surugaseiki.com</a>
E-mail: <a href="mailto:e-ost@suruga-g.co.jp">e-ost@suruga-g.co.jp</a>

SURUGA SEIKI Co., Ltd. a MISUMI Group Company

- Head Office & Main Factory 505 Nanatsushinya, Shimizu-ku, Shizuoka-city, Shizuoka 424-8566 JAPAN
- Tokyo Branch Office 3F Konan YK Bldg., 2-4-12an, Minato-ku, Tokyo 108-0075 JAPAN





Disassembly or repairs carried out by the customer may result in injury. Never disassemble or repair the product.

#### 4.3 Storage and Transport

#### ■ Storage and transport environment

Storage and transport environment: -25 to 70 °C (there should be no freezing), 85% RH or

lower (there should be no condensation)

Protection level: IP00 Pollution level: 2

**⚠WARNING** 

Avoid storing the product in places such as the following.

- · Places with a lot of dust or powder dust (especially metal powder)
- · Places exposed to direct sunlight or radiant heat



- · Places near fire
- · Places where the product may be exposed to water or oil
- · Places where corrosive gas or flammable gas are produced
- · Places subject to vibration or shock
- · Places with a lot of salt content or organic solvents
- · Places where X-rays are in use





#### **■** Storage precautions

Disconnect the cable and store it in the SURUGA SEIKI packaging.

Do not place anything on the packaging.



#### **■** Transport precautions

· Do not drop or strike the product.



- · Disconnect the cable, and carry the product by holding the base with both hands.
- · When transporting the product in a manner in which vibrations are applied, do so in the SURUGA SEIKI packaging.

## 4.4 Disposal Method





When disposing of the product, do so in an appropriate manner using the disposal method specified in the laws and ordinances of each country.

## 5. Warranty Scope, Warranty Period

If product defects such as damage, deformation, or flaws attributable to SURUGA SEIKI are
acknowledged, the product shall be replaced, either in part or in full, or the defect, etc. repaired free
of charge provided that SURUGA SEIKI receives a satisfactory, detailed account of the defect, etc.
within the warranty period (defined in next item), and SURUGA SEIKI acknowledges that they are
responsible for the defect, etc.

However, defects, etc. applicable to the following items are not covered by the scope of this warranty.

- (1) Defects, etc. arising from the use of this product in the medical equipment, pharmaceutical, biological, food, or cosmetic fields
- (2) Defects, etc. arising from the use of this product for aerospace instruments, nuclear plant components, weapons, arms, or other military applications
- (3) Defects, etc. arising from careless or incorrect handling by the customer
- (4) Defects, etc. arising from natural disasters (includes, but not limited to earthquakes, fire, floods)
- (5) Defects, etc. arising from use of the product that does not comply with the prohibited or compulsory items, standards, applications, or usage conditions, etc. highlighted by the danger, warning, and caution items indicated in this manual.
- (6) Defects, etc. arising from unauthorized machining of, repairs to, modification of, or disassembly and so on of the product by the customer.
- (7) Defects, etc. caused by other equipment.
- (8) Defects, etc. arising from use with unfamiliar or unexpected purpose or method.
- The warranty period applicable to this product as prescribed in these warranty provisions shall be one year from the date on which the product is delivered to the customer by SURUGA SEIKI.
- 3. This warranty does not apply to defects such as minor scratches, dirt, dents, or discolouration, etc. that do not render use of the product impossible. The warranty shall apply, however, if the relevant scratches, dirt, dents, or discolouration, etc. are acknowledged as being particularly prominent by SURUGA SEIKI.
- 4. The customer should inspect the product within one week of the day on which it is received to check the name, model, and quantity, whether the product matches the standards indicated in this catalogue, and whether there are any defects, etc., and if any defects, etc. are found, SURUGA SEIKI should be notified during the relevant period. If SURUGA SEIKI is not notified within the relevant period, it shall be deemed that any defects, etc. which should be subject to replacement or repair have passed the customer's inspection, and therefore caution is advised.

- 5. A fee shall be required for product replacement or repairs after the warranty period has expired, or for reasons which lie outside the applicable scope of these warranty provisions other than the scope of the warranty.
- 6. There may be cases in which repair or replacement is not possible depending on the product characteristics, date of manufacture, or standards.

#### **■** Contact Information

Tel: +81-3-6711-5014

FAX: +81-3-6711-5021

URL: <a href="http://eng.surugaseiki.com">http://eng.surugaseiki.com</a>

E-mail: e-ost@suruga-g.co.jp

## SURUGA SEIKI Co., Ltd.

a MISUMI Group Company

## **■** Head Office & Main Factory

505 Nanatsushinya, Shimizu-ku, Shizuoka-city, Shizuoka 424-8566 JAPAN

## **■ Tokyo Branch Office**

3F Konan YK Bldg., 2-4-12 Konan, Minato-ku, Tokyo 108-0075 JAPAN

PGF17-0013-001